

# VET 1-60 Single Point Timer

Timer for BH pneumatic vibrators


This unit operates one output through a variable time cycle.

- A- Power Switch
- B- Off Time Adjustment
- C- On Time Adjustment
- D,E – Off Time Jumper
- F,G – On Time Jumper

- 1,2 – Power Input Terminals
- 3,4- Output Terminals
- 5,6- Remote Terminals

## Specifications

- Time Range: ON 1.5 sec. - 60 Min.
- OFF 1.5 sec. – 60 Min.
- Outputs: 1 @ 120 VAC, 1 Amp
- Input: 120 VAC, 60 Cycle
- Operating Temp Range: -20 F to 130 F
- Dimensions: 6 x 8 x 3.5
- Repeatability :  $\pm 2\%$

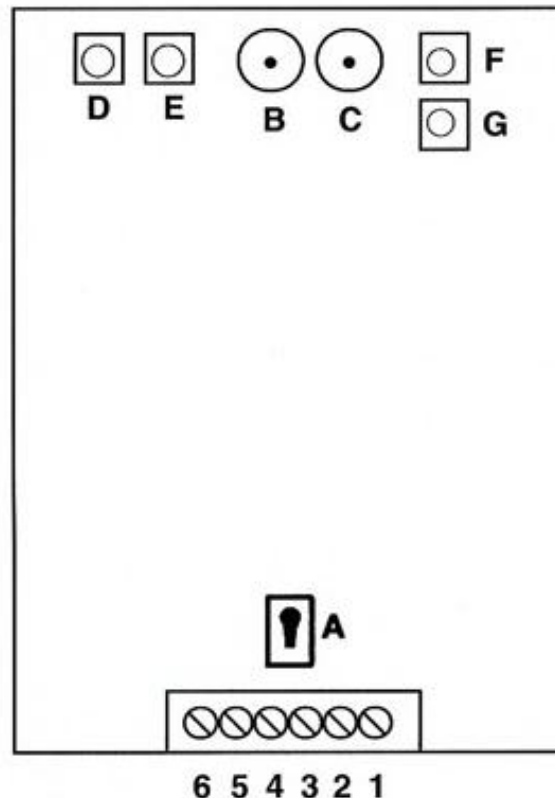

## Installation instructions

1. Connect output leads to terminals 3 & 4, common to terminal 4.
2. Connect 120 VAC, power source to terminals 1 & 2, neutral to terminal 4.
3. If desired connect remote switch leads to terminals 5 & 6.
4. Time Range Selection:
  - a. For "ON" time range of 1 min. to 1 hr., connect jumper from terminal F to G.
  - b. For "ON" time range of 1.5 sec. to 1 min., disconnect jumper terminal F to G.
  - c. For "OFF" time range of 1 min. to 1 hr., connect jumper from terminal D to E.
  - d. For "OFF" time range of 1.5 sec. to 1 min., disconnect jumper from terminal D to E.
5. Turn unit "ON" using power switch A.
6. Adjust "ON" and "OFF" times within selected range using dials B and C, respectively.